



Dell chromebook 3180 LCD Bezel Frame Replacement

This will repair the Bezel which is the frame around the actual LCD.

Written By: Jon



INTRODUCTION

Outline what you are going to teach someone how to do.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Metal Spudger \(optional\)](#) (1)
 - [Plastic blade](#) (1)
-

Step 1 — Prepare CB for LCD Bezel Removal



- Open the chromebook until its completely flat on the table
- Remove both the left and right hinge caps
- Remove a total of 4 screws. One in each corner.

Step 2 — Remove the LCD Bezel



- Use a plastic pry tool or blade and start in the top left corner or first left plastic ridge.

Step 3 — Reinstall LCD Bezel



- When installing the LCD bezel, look for the plastic hinge outlines on each side and match them up with the metal hinges on the chromebook.
- Snap the LCD bezel in place until it is flush with the entire LCD assembly

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-04 04:22:15 PM.